

# Epson Projector Instructions

## Power On

Find the large white Epson remote control and press the **POWER** button located in the upper left of the control. Press this button **once**. You may stand anywhere while performing this action.

You should not have to press any other button on the remote. The projector will automatically sense the input is on the HDMI 1 input.


## Warm Up

The projector takes several minutes to warm up before it will display any kind of image. Be patient. You can tell if the projector has been activated by looking at the bottom of the projector and confirming that both blue lights are lit.

## HDMI Switch

The HDMI switch is the smaller of the two boxes pictured below.

There are three inputs on the HDMI switch which determine the source for the projector. The active input has a blue light. The iMac on the teacher's desk is INPUT 1.

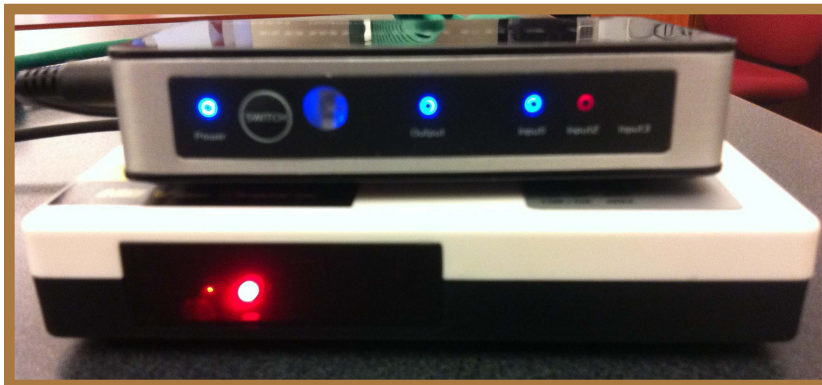

## iMac Display

If the projector screen indicates no HDMI input, you need to briefly select one of the other inputs on the HDMI switch and then select INPUT 1 again. After switching inputs you will need to wait for 30 seconds while the projector gains sync.

There are two ways to change the input on the HDMI switch. You can use the SWITCH button (next to the power light) on the switch itself. This will step through each input one by one for each button press.

The second option is to use the small white HDMI Remote Control and select the input number directly by aiming the remote at the HDMI switch and pressing the number buttons or cycle through the inputs using the arrow buttons.



# Epson Projector Instructions


---

## Laptop Display

There are two other inputs available for connecting a laptop to the projector.

The blue connector is for VGA output and is connected to INPUT 2 on the HDMI switch.

The white connector is for Apple's mini display port output and is connected to INPUT 3 on the HDMI switch.

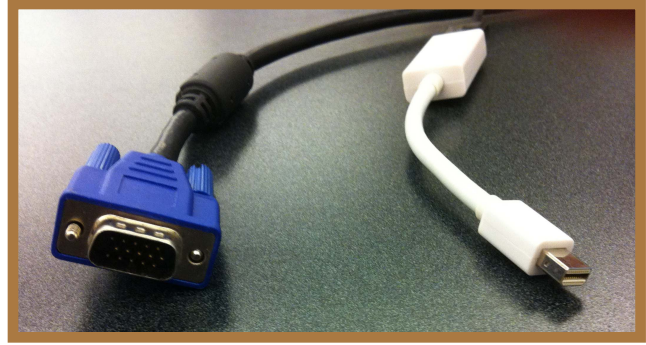

## Shutdown

Using the large white Epson remote control, press the **POWER** button twice to turn the projector off.

Please remember to put the remote controls back in the top drawer of the teacher's desk and lock the desk.

## Epson Projector

This is a view of the bottom of the Epson Projector showing the two blue lights indicating that the projector is powered on and ready for use.

