


# COPYING VHS RECORDINGS TO DISC

## HELPFUL HINTS

- For maximum compatibility blank DVD-RW or DVD-R discs should be used.
- Only non-copy protected VHS Tapes may be recorded to disk.
- Only one DVD Recorder may be used at a time because the remote will affect both units. However, a tape or disc played MANUALLY on the spare unit will not affect the primary.
- Audio may be monitored via the supplied headphones.
- These instructions provide steps for basic VHS copying to disc. For custom transfers please refer to the Toshiba DVD VIDEO RECORDER Owner's Manual.

## PREPARATION:

1. Power on the ViewSonic monitor by pressing the top button on the right side of the display. A blue light should appear on the bottom of the display.

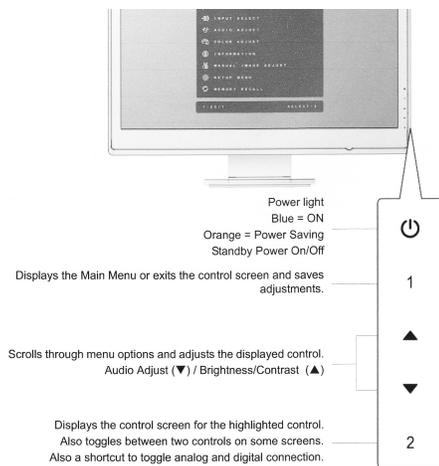

2. Power on the Toshiba DVD Recorder by pressing the button located on the left front of the unit. A green light should appear adjacent to the DVD Recorder button.

3. Select the appropriate recorder by pressing either button 1 or 2 on the right side of the ViewSonic monitor. A blue screen should appear on the monitor indicating the DVD recorder is operational.

- Button 1 refers to the top DVD Recorder,
- Button 2 refers to the bottom DVD Recorder.


4. It's always a good idea to preview a VHS tape prior to recording to ensure proper positioning and tracking. It's also important to completely fast forward and rewind a tape if it hasn't been used for a long time. To preview a VHS tape insert the tape into the appropriate slot on the Toshiba DVD Recorder you intend to use. If the tape doesn't automatically begin playing, use the remote control device to select **VCR** then press **PLAY**.

Ensure the tape is tracking properly by observing the monitor playback. If video tearing, bars or excessive noise are observed adjust the **TRACKING** controls on the remote for the best presentation.

5. When satisfied with the VHS playback, rewind the tape to the appropriate starting position and press **STOP** on the remote.
6. Press the DVD **OPEN/CLOSE** button on the Toshiba DVD Recorder and insert a blank DVD. Close the door by pressing the **OPEN/CLOSE** button again and allow the unit to complete loading/reading the blank disc. This can be observed on the monitor.

## RECORDING:

1. Select the VCR mode on the remote. Ensure the VHS tape to be recorded is positioned properly by pressing **PLAY** then **PAUSE**.
2. Switch to the DVD mode by pressing the **DVD** button on the remote.
3. Select the appropriate DVD record time setting by repeatedly pressing the **REC MODE** button on the remote according to the table below:

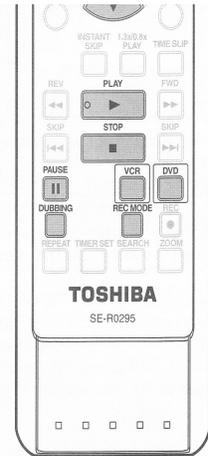

**HINT:** **REC MODE** button is located just below **VCR** button.

\* Please Note: Quality is a relative term useful when recording directly to disc from a high quality source. When dubbing a VHS tape use the setting that most closely matches the running time of the tape.

Recording Mode	Recording time	Quality*
XP	60 min	*****
SP	120 min	****
LP	240 min	***
EP	360 min	**
SLP	480 min	*

4. Press the **DUBBING** button on the remote and your recording should begin automatically. Observe progress on the monitor.
5. When your recording ends the system will automatically stop after 3-minutes of no video. To manually cease recording simply press **STOP** on the remote control.
6. The unit will write your recording on the DVD and then revert to the playback mode. At this point you may review your DVD recording or press the **OPEN/CLOSE** button on the recorder to retrieve your disc.
7. To eject your VHS tape select **VCR** on the remote and press the **OPEN/CLOSE** button. You may also elect to rewind your VHS tape by pressing the **REV** button on the remote.

## FINALIZING:

1. To ensure your disc is compatible with other DVD players it's important to finalize your disc after copying all video. Finalizing uses up any remaining space on the disc so that no new data can be written and your disc can easily be read by any DVD player.
2. To do this simply press **SETUP**, select **DVD MENU**, select **FINALIZE**, **YES** and press **ENTER**. The time needed to complete this step is dependent on the space left on your disc. Your disc is now finalized and you're done.